


Can I change ventilation rates for rooms?

Yes, this is done by clicking on the room and changing the *Room Type* to a *Custom Room*. You can then edit the *Air Changes Per Hour* to suit your needs.

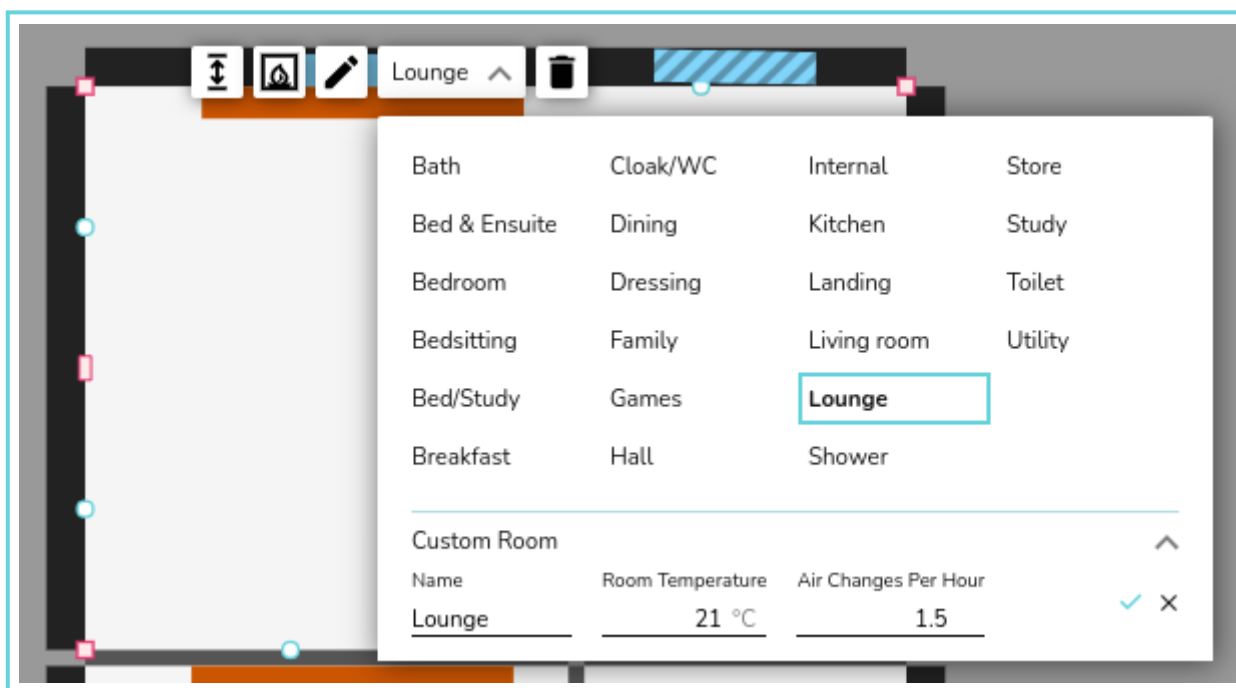

For more information on this topic see our guide on [creating a floor plan](#).

Revision #13

Created 8 November 2024 13:06:17

Updated 23 April 2026 11:17:02 by Daisy