


Can I change ventilation rates for rooms?

Yes, this is done by clicking on the room and changing the *Room Type* to a *Custom Room*. You can then edit the *Air Changes Per Hour* to suit your needs.

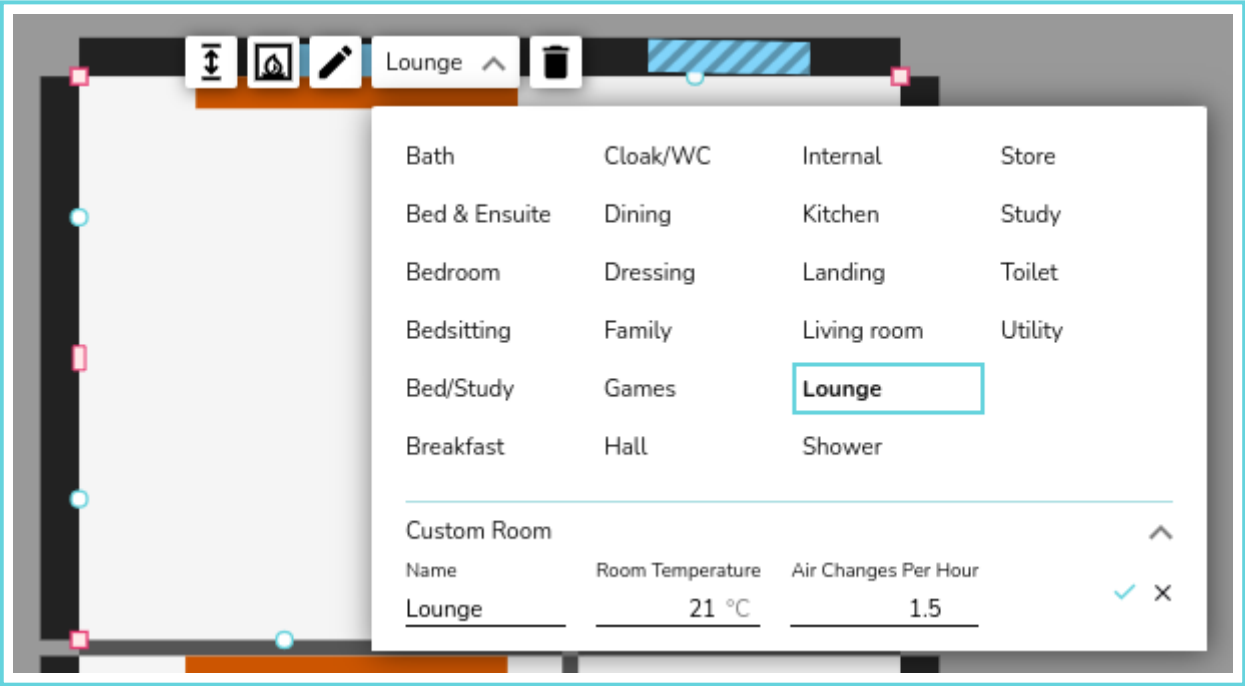

For more information on this topic see our guide on [Editing Room Properties](#).