


How do I add hot water storage?

How water storage can be added within the Heat Pump task. Simply scroll to the Hot Water Storage section and click the *pencil* icon. Here you can choose from either Heatpump's recommendations or our full list of heat pumps. The recommendations given, are based on the number of bedrooms and occupants. These can be edited at the top of the page and new recommendations generated.

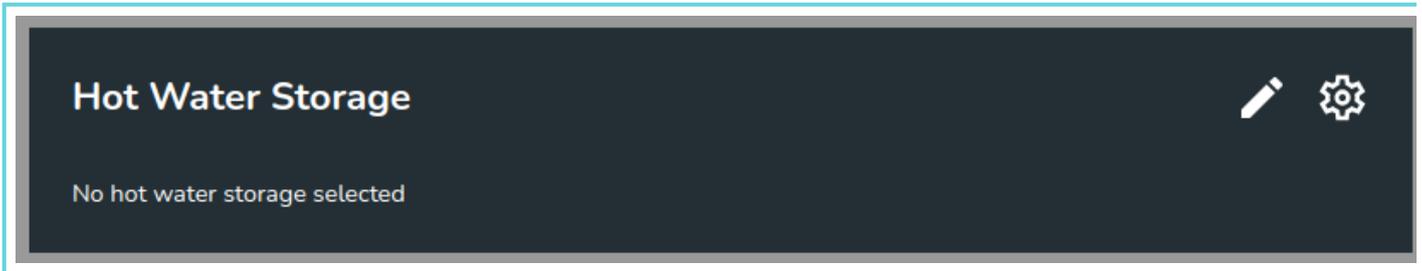

You should also review and edit the Hot Water Storage settings as necessary by click on the cog icon, next to the *pencil*.

Hot Water Storage Settings

DHW Storage Temperature

 °C

Difference between flow temperature while providing hot water and storage temperature

 °C

Flow Temperature while providing hot water

 °C

Draw Water Temperature

 °C

Supply Water Temperature

 °C

Pipework Efficiency

 %

Water used per person per day

 ℓ

Legionella

Legionella purge required

 ▼

Legionella purge frequency

 ▼

Legionella purge hours (per day or per week)

 hr

Legionella heat source

 ▼

Legionella purge temperature

 °C

Close

Updated 2 January 2025 12:21:57 by Harry Doyle