


How do I change the ceiling height of a room?

To change the ceiling height across the whole floor, click the three dots next to the relevant floor in the left-hand menu and click **Edit** and change the value of the ceiling height as

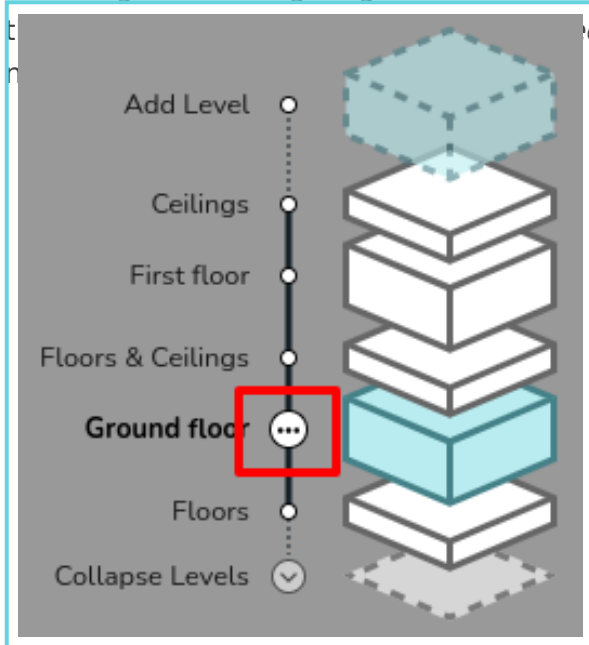

Level Description

Fill out the details for this level. Add or edit the level name, and enter the default ceiling height.

Floor Name	<input type="text" value="Ground floor"/>
Room Ceiling Height	<input type="text" value="2400"/> mm

CancelConfirm

To adjust the height of just one room, select the relevant room, and click the two sided arrow icon. Then enter the value needed for ceiling height. Ensure you click the tick after editing the value to save your changes.



For more help on this topic, see our guide on [Floors and Ceilings](#).

Revision #3

Created 2 January 2025 10:12:11 by Harry Doyle

Updated 3 January 2025 16:39:44 by Harry Doyle