 


# How do I change the dimensions of doors, windows and radiators?

Doors, windows and radiators are represented by coloured bars. You can click and drag the red handles at either end of doors, windows, and radiators to change their width. Alternatively, you can select the relevant door, window or radiator, and then click the *dimensions* icon. This allows you to input exact values for the width and height of your door, window, or radiator. Ensure you click the *tick* after editing these values to save your changes.



For more help on this topic, see our guide on [Walls, Windows, Doors and Radiators](#).

---

Revision #3

Created 2 January 2025 10:37:14 by Harry Doyle

Updated 3 January 2025 16:41:45 by Harry Doyle