

How do I change the Outdoor Design Temperature (ODT) for my project?


To change the ODT, follow these steps:

Note this will **not** affect the Outdoor Low Temperature (ODL) used in the performance task. [Read here for more information.](#)

1. Navigate to the **Plan task** and the *Sources* tab
2. Below the sound heat pump load and sound check, click *Outside design temperature*
3. Set the temperature you want to use

Outside design temperature

Set a custom outside design temperature (ODT) for extreme environments. Your current heat pump configuration supports ODTs between -10°C and 2°C.

°C 

Adjust with caution. Our automatic ODT, based on property Postcode **W10 2LH, provides a more accurate result.** Note, changing this value does not affect the "outdoor low temperature" used in the MCS performance task.

Cancel

An additional **0.3°C** will need to be removed for every **50 m** above sea level, with altitude given in the input section of the technical report & customer proposal.

Revision #9

Created 17 March 2025 10:38:01 by Matt Agnes

Updated 1 June 2026 09:34:56 by Daisy