


How do I delete an entire floor?

In the levels diagram on the right hand side of your screen find the floor you'd like to delete and click on the three dots next to it. This will show you the option to either edit or delete this floor. Note, you can not delete the ground floor.

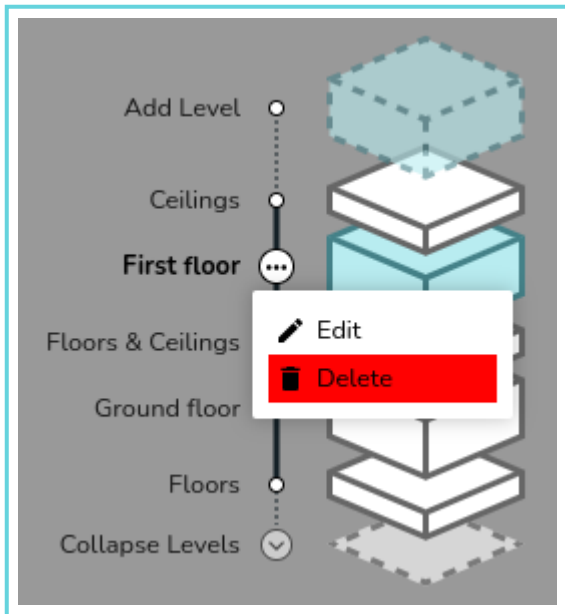

For more information on this topic, see our guide on [Floors and Ceilings](#).

Revision #1

Created 8 November 2024 13:09:15 by Harry Doyle

Updated 2 January 2025 10:36:50 by Harry Doyle