

How do I specify a parting wall?

Click on the wall you want to specify and use the drop down menu to select whether the other side of this wall is a heated or unheated space. By default the drop down will be set to *Outside*.

For more information on this topic see our guide on [creating floor plans](#).

Revision #10

Created 8 November 2024 13:01:22

Updated 23 April 2026 11:17:02 by Daisy