

How do I specify a parting wall?

Click on the wall you want to specify and use the drop down menu to select whether the other side of this wall is a heated or unheated space. By default the drop down will be set to *Outside*.

For more information on this topic see our guide on [Walls, Windows, Doors and Radiators](#).

Revision #2

Created 8 November 2024 13:01:22 by Harry Doyle

Updated 3 January 2025 16:38:56 by Harry Doyle