

How do you see the dimensions of a room & manually change them?

Clicking on the corner point of any room will display the adjacent dimensions. By clicking on the dimensions themselves you can edit the values by typing in the text box shown.

For more help on this topic, see our guide on [Creating Rooms](#).

Revision #3

Created 8 November 2024 12:48:33 by Harry Doyle

Updated 3 January 2025 16:36:40 by Harry Doyle