

How do you select underfloor heating?

Underfloor heating can only be implemented in the *Heat Pump* design stage. To do this, select *Add Heat Emitter* and choose *Underfloor* which will prompt you to input the floor area covered by the underfloor heating elements and their outputs in W/m^2 .

Revision #1

Created 8 November 2024 12:58:28 by Harry Doyle

Updated 2 January 2025 09:44:37 by Harry Doyle