

# How do you select underfloor heating?

Underfloor heating can only be implemented in the *Heat Pump* design stage.

To do this, select *Add Heat Emitter* and choose *Underfloor* which will prompt you to input the floor area covered by the underfloor heating elements and their outputs in  $W/m^2$ .

---

Revision #2

Created 8 November 2024 12:58:28 by Harry Doyle

Updated 28 May 2025 11:43:56 by Daisy Kernick