

What do I do if only a section of the wall is a parting wall?

If only a section of the wall is a parting wall, for instance, if there is a garage behind half the wall but not the other half, you can split the wall using the [blue handles](#).

Simply drag and drop the blue handle to the point where the wall needs to be split.

You can then select whether the other side of this wall is a *heated* or *unheated* space. In the example, you would select one half of the wall as *unheated* space and the other as *outside*.

Revision #6

Created 2 January 2025 11:56:08 by Harry Doyle

Updated 28 May 2025 11:32:23 by Daisy Kernick