


Editing Room Properties


Once you have created a floor plan you can change the properties of each room by clicking on it.

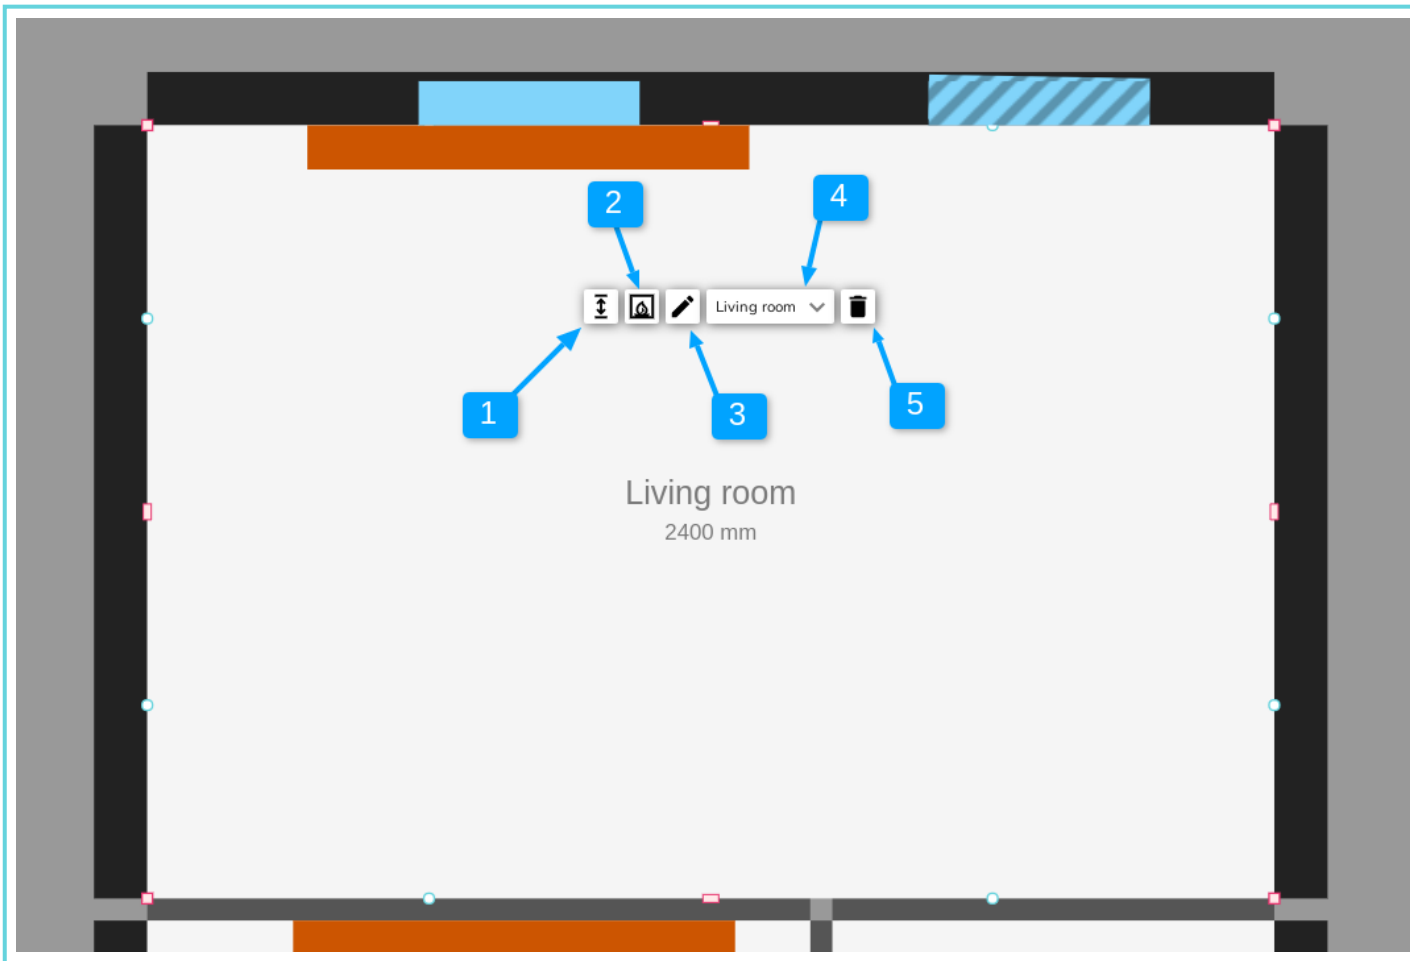

1. Use this tool to change the height of the ceiling. Note, this is for the selected room only.
See our guide on [Floors and Ceilings](#) for how to edit the ceiling height for the whole floor.
2. Use this tool to toggle whether there is a flue or not in this room.
3. Use this tool to change the name of the room.
4. Use this menu to change the room type. This will also change the air changes and design temperature for the room in line with the room type chosen. See below for custom room types.
5. Use this button to delete the room.

Custom room types

If you need custom air changes and design temperatures for a room you can do this by using a custom room type. When choosing the room type from the drop down menu, select *Custom Room* and edit the *Name*, *Room Temperature* and *Air Changes Per Hour* as necessary.

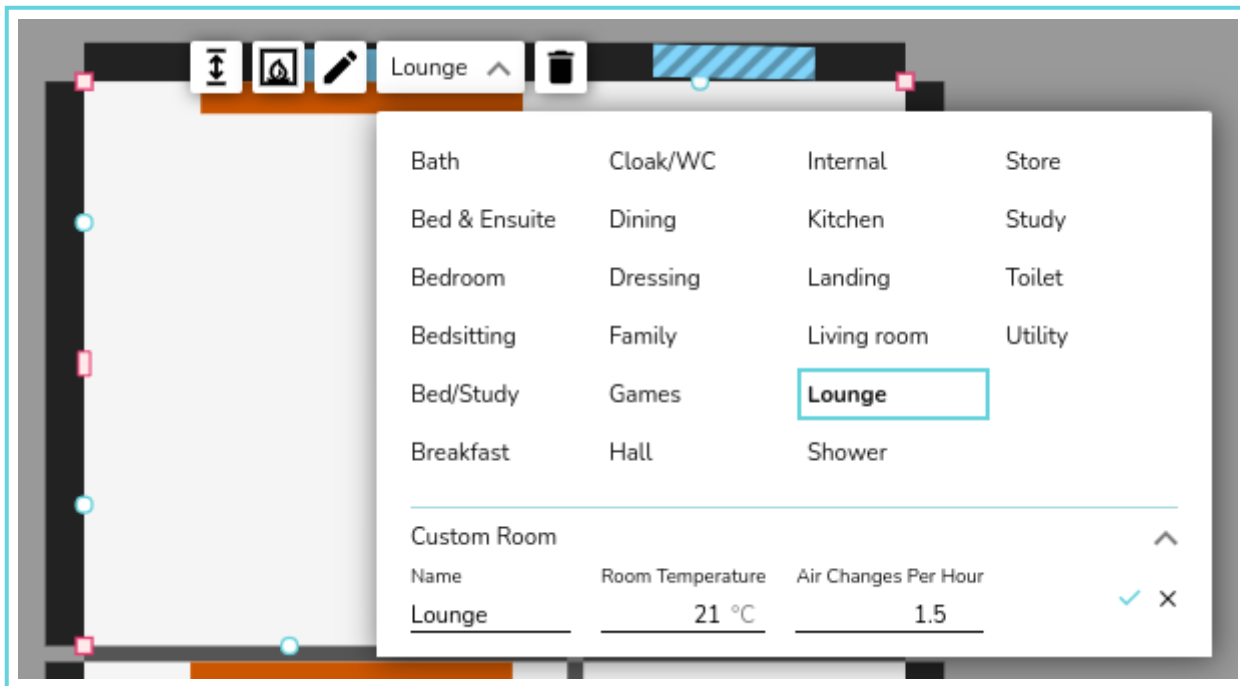

Revision #4

Created 3 January 2025 12:20:35 by Harry Doyle

Updated 28 May 2025 11:21:40 by Daisy Kernick