
How do I select underfloor heating? - old

While on the Plan task, from the **Emitters sidebar**, click the icon and then select **Add Underfloor Heating** which will prompt you to input the floor area covered by the underfloor heating elements and their outputs in W/m^2.

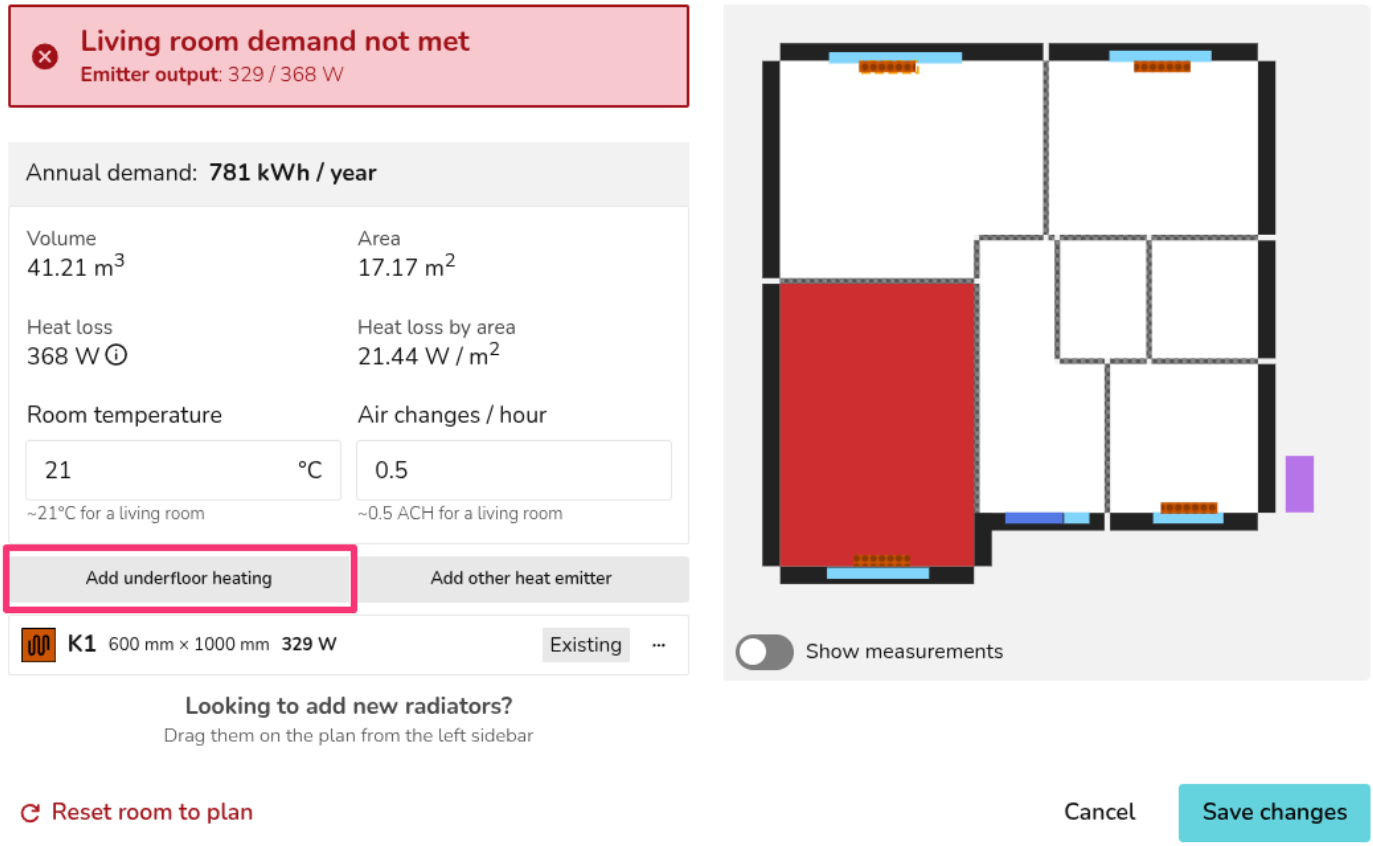

Revision #3
Created 19 November 2026 12:18:45 by Saira Noor
Updated 19 November 2026 15:52:18 by Saira Noor