
Can I change ventilation rates for rooms?

Yes, this is done by clicking on the room and changing the **Room Type** to a **Custom Room**. You can then edit the **Air Changes Per Hour** to suit your needs.

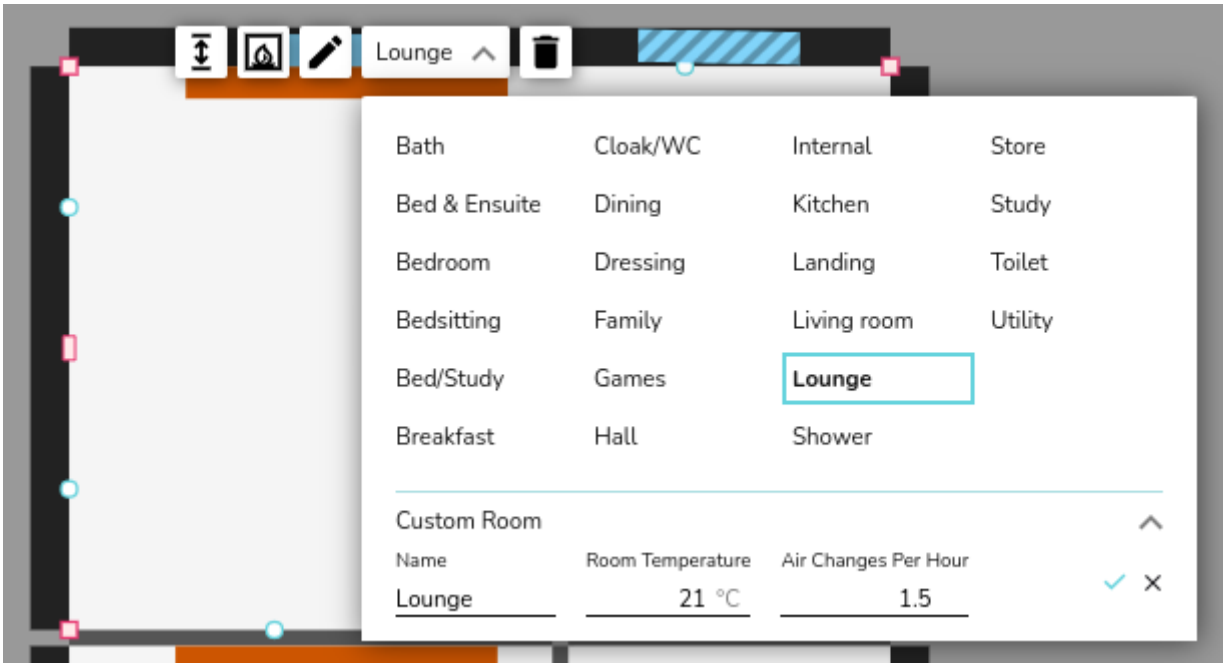

For more information on this topic, see our guide to creating a floor plan.

Revision #14
Created 8 November 2024 13:06:17
Updated 5 October 2026 11:27:46 by Emma