How can I choose between the 99th and 99.6th percentile outdoor design temperature (ODT)?

heatpunk.co.uk*This guide applies to Heatpunk UK.*

Choose default for all new projects your Pro team make:

For Pro teams only

An **admin or owner** can navigate to **Pro Account Settings** > **Design** > **view and edit** default temperatures.

With either postcode lookup or zone lookup selected, you can use the **toggle** to switch between 99th percentile coldest outdoor dry bulb temperature and 99.6th percentile coldest outdoor dry bulb temperature. The default will be the 99th percentile. Click **confirm**.




> **Note**: Your **Pro team's design settings take priority** over your individual user's design settings.

Choose default for all new projects you make as an individual user:

Navigate to **My account** > **Preferences** > **Design** > **View and edit user-level default temperatures**. Then you can use the toggle as above before clicking confirm.

> **Note**: For individual users not in a Pro team, these settings will apply by default to all new projects you create, unless individual project values are adjusted.

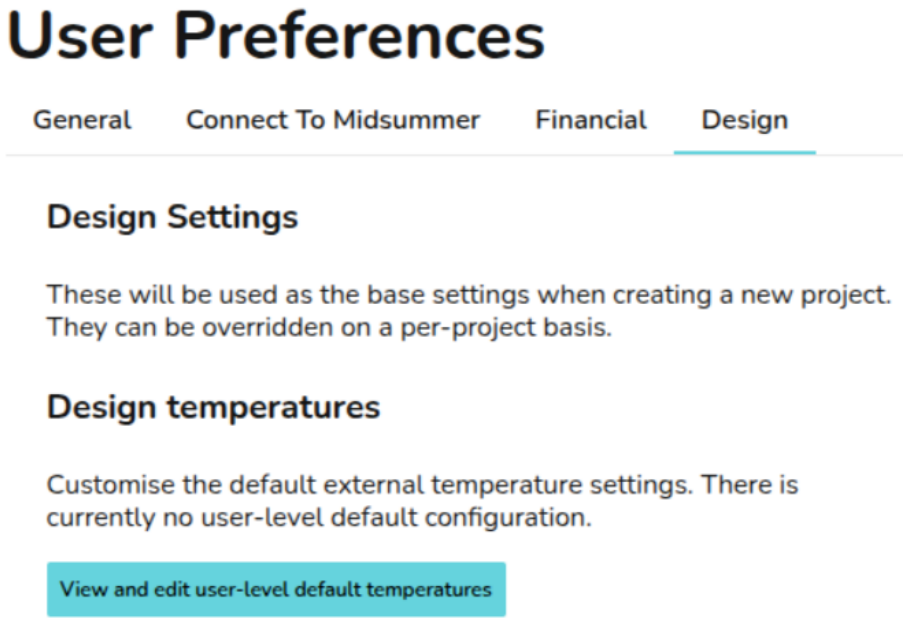

Choose setting for one project:

In your project, navigate to the Plans task. Click the 3 dots in the top right corner to view more options then select **Temperature configuration**. Then you can use the toggle as above before clicking confirm.

> **Note**: This overrides Team and User settings, letting you change temperatures on a per project basis when needed.

> **Note**: In the Performance task, the **outdoor low temperature** uses the 99.6th percentile, regardless of which ODT is selected.

Find out more about how the ODT is set.

Find out more about how to change the ODT.

Revision #10
Created 8 October 2026 09:33:14 by Emma
Updated 2 November 2026 12:32:23 by Saira Noor