

How do I change the ceiling height of a room?

To change the ceiling height across the whole floor, click the three dots next to the relevant floor in **edit** and change the value of the ceiling height as

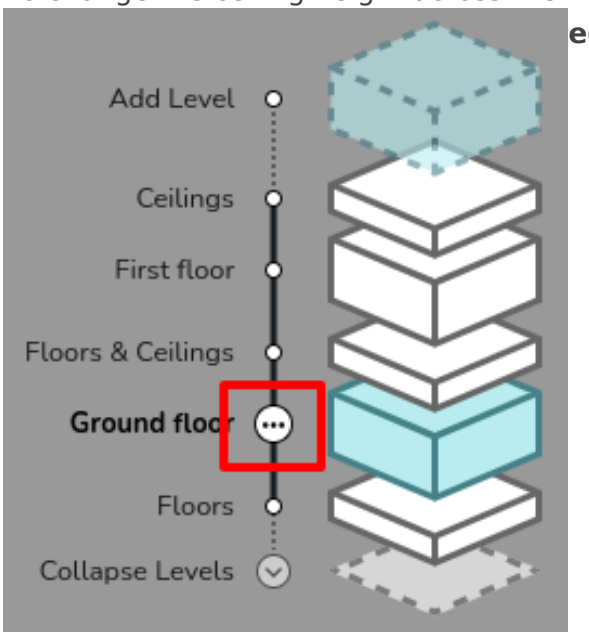

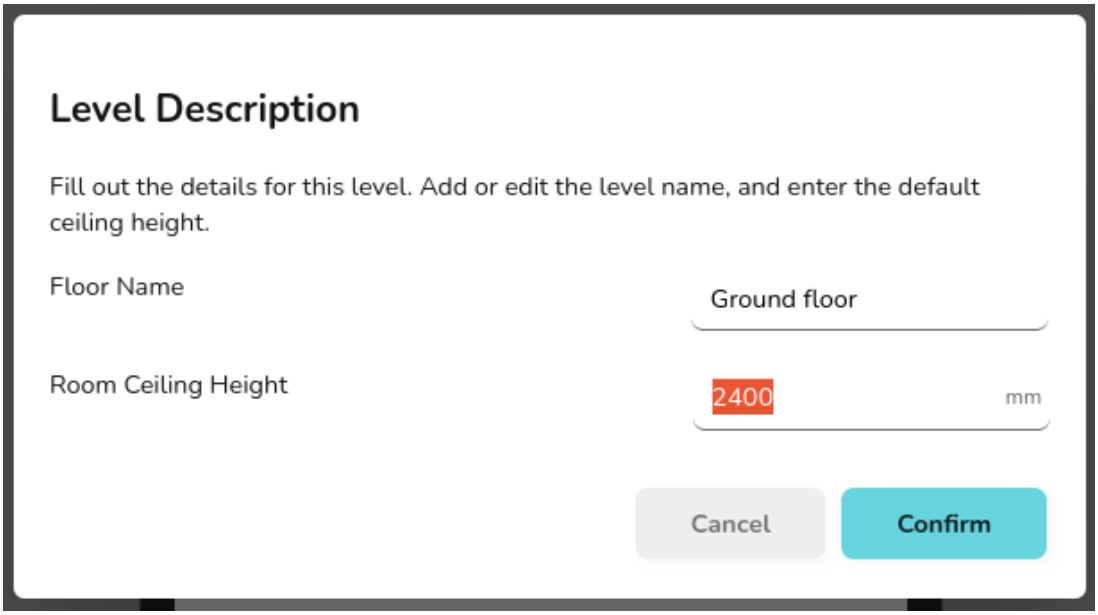

To adjust the height of just one room, select the relevant room, and click the two sided arrow icon. Then enter the value needed for ceiling height. Ensure you click the tick after editing the value to save your changes.



For more help on this topic, see our guide on Floors and Ceilings.

Revision #13
Created 2 January 2025 10:12:11
Updated 5 October 2026 11:26:47 by Emma