
How do you select underfloor heating?

While on the Plan task, from the **Emitters sidebar**, click the icon and then select **Add Underfloor Heating** which will prompt you to input the floor area covered by the underfloor heating elements and their outputs in W/m^2.

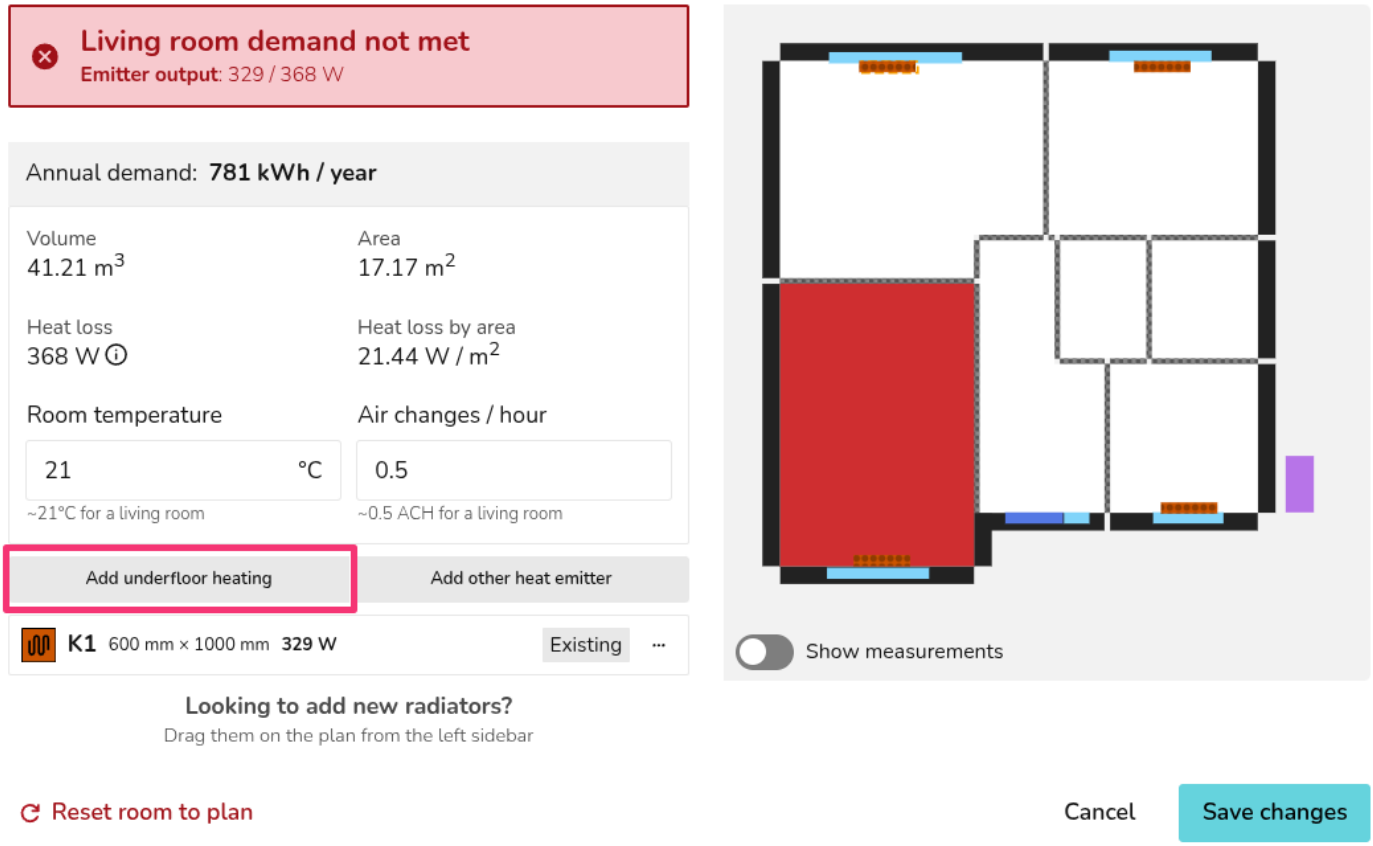

More information and a video can be found on our emitters guide.

Revision #4
Created 8 November 2024 12:58:28
Updated 5 October 2026 11:55:37 by Emma